
JB4 Connect Kit (Pinned Power) Install Guide

1) Open the JB4 enclosure.



2) Install the DB9 connector and ensure both screws are secure.

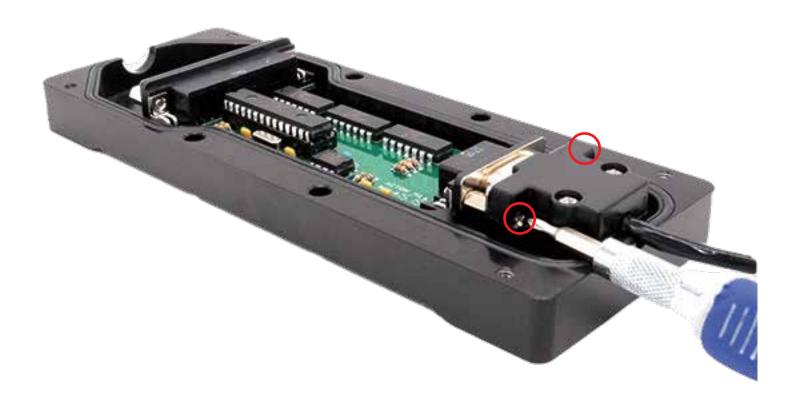

3) Put the JB4 enclosure back together.



Very Important

4) Ensure the Connect Kit *IS NOT* in direct contact with the metal JB4 enclosure or any other nearby metal. Aim the smaller side of the Connect Kit (circled below) DIRECTLY towards the driver's seat for best signal quality. Failure to do this may lead to connectivity issues.

